

Fortigate NTP Server ab OS 7.2

```
config system ntp
  set ntpsync enable
  set type custom
  set syncinterval 30
  config ntpserver
    edit 1
      set server "0.at.pool.ntp.org"
    next
  end
  set server-mode enable
  set interface "lan"
end
```

Danach ist die Option auch grafisch verfügbar.

From:

<http://osit.cc/dokuwiki/> - DEEPDOG.AT - enjoy your brain

Permanent link:

http://osit.cc/dokuwiki/doku.php?id=firewalls:fortigate:ntp_server_ab_os_7.2&rev=1666428507

Last update: **2025/11/29 22:06**

