

# LCD-show Raspberry Pi

Projektseite: <https://github.com/Lcdwiki/>

Um das Minitouchdisplay zu aktivieren:

## Raspberry Pi Stand 10.2022

```
rm -rf LCD-show
git clone https://github.com/Lcdwiki/LCD-show.git
chmod -R 755 LCD-show
cd LCD-show/
./MHS35-show
```

## Ubuntu 22.04 Stand 10.2022

```
rm -rf LCD-show-ubuntu
git clone https://github.com/Lcdwiki/LCD-show-ubuntu.git
chmod -R 755 LCD-show
cd LCD-show-ubuntu/
./MHS35-show
```

From:  
<http://osit.cc/dokuwiki/> - DEEPDOC.AT - enjoy your brain

Permanent link:  
[http://osit.cc/dokuwiki/doku.php?id=server\\_und\\_serverdienste:lcd-show\\_raspberry\\_pi&rev=1666979378](http://osit.cc/dokuwiki/doku.php?id=server_und_serverdienste:lcd-show_raspberry_pi&rev=1666979378)

Last update: 2025/11/29 22:06

